



 **VILDIKA**

- Control box and hand switch consolidated in one compact and lightweight unit.
- Energy-efficient allow for up to 50W lower consumption compared to previous generations.

## Technical specification

### FUNCTION

Control: 2-parallel system  
Speed: up to 30mm/second  
Soft start: progressive acceleration ensures soft height adjustment  
Maximum load: 120 kg  
Travel range: 500, 600 & 650mm

### DIMENSIONS & WEIGHT

Control unit: 115 x 96 x 23 mm, 95 g  
Power unit: 115 x 53 x 37 mm, 330 g  
Power cables: Length 1500 mm (primary side)  
Length 1900 mm (secondary side)  
Motor cable: Length 1500 mm

### ENERGY USE

Standby: 0,5 W  
Operation: 88 – 146 W at 0-120kg load

### ELECTRONIC DATA POWER UNIT

Input: 110-240V  
Frequency: 50/60Hz  
Output: 29V  
Power Plug: EU

### OPERATING ENVIRONMENT

Compatibility: Motor hall sensor Bosch 24V, actuator ED  
Operating Cycle: 1 minute on, 9 minutes off  
Operating Temperature: +10° C to +40° C (indoors)

### OPTIONS

Color Control Unit: black, white  
Collision detection: on/off

### MATERIALS:

Cover Control Unit: ABS plastic

## Control System

## Technical specification

### SAFETY FEATURES



- Overheating Protection:** Table is inoperable when the overheating protection has shut down the control unit.  
Control unit will be reactivated automatically when temperature has dropped sufficiently.
- Intermittency Function:** The operating cycle of the control unit is 10%, which means that the table can be operated for 1 minute at maximum load, after which it will stop and must remain inactive for nine minutes.  
Lesser loads allow for longer operating cycles. Control unit is automatically reset.
- Memory Function:** The control unit stores information on the elevation of the table at all times. This information remains stored even when the power supply is interrupted, for instance during a blackout or if the power plug is disconnected.

### STANDARDS & ENVIRONMENT

#### EMC

Control Unit: RoHS WEE CE Reach

Power Unit: WEE CE UL TÜV/GS

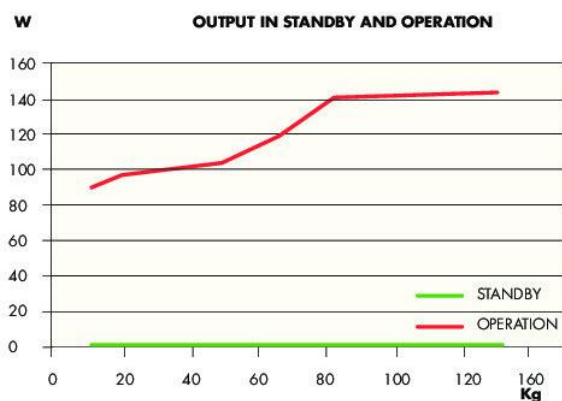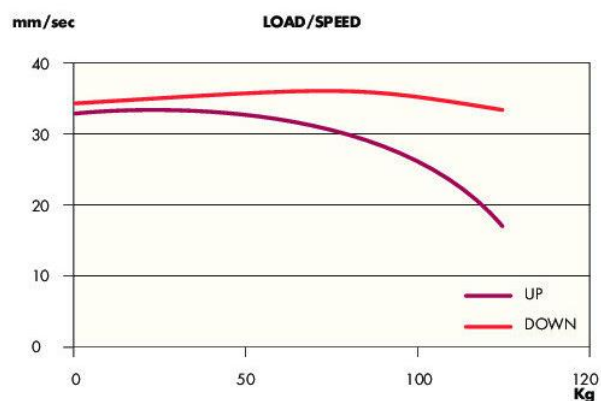

Hand control with built-in control system.



Power source



Stand with mounted control system

## User Instructions - Control Unit

### FRAME ASSEMBLY

Assemble columns Leg system, foot/feet and bar/bars

Make sure that the power cable is correctly secured by slotting it into the groove in the motor housing.

### CONNECTING CONTROL UNIT

1. Mount the control unit to the desktop in the desired location.
2. Connect the motor cables
3. Connect the power unit to the control unit and the power outlet
4. Remember to reset the unit on first use

### RESETTING UNIT ON FIRST USE

Before the table can be used, the control unit must be reset to establish the lowest point of the table. This is achieved by first lowering the table as far as it will go. Until this is done, it will not be possible to elevate the table.



#### RESET UNIT ON FIRST USE




1. Lower table to lowest point by pressing "Down" button
2. Table is ready to use

### RESETTING AFTER REPLACING CONTROL UNIT

If a control unit is replaced or switched, the new control unit must first be reset to establish the lowest point of the table. To do this, press and hold the "Up" and "Down" buttons simultaneously for at least 7 seconds and then press "Down" to bring the table to the lowest point. The control unit will now have registered the lowest point and the table is ready for use. Verify correct functionality by elevating the table to the highest point and then back to the lowest point.

#### RESETTING AFTER REPLACING CONTROL UNIT

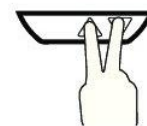

1. Press and hold "Up" and "Down" simultaneously for 7 seconds



2. Lower table to lowest point by pressing "Down" button
3. Table is ready to use

The control unit is equipped with two safety features; the intermittency function and the overheating protection

- **Intermittency function** – The intermittency factor of the control unit is 10%, meaning it can be operated for 1 minute after which it must remain inactive for 9 minutes. If the one-minute limitation is exceeded, the table will become inoperable until the control box resets automatically.
- **Overheating protection** – The table will become inoperable if the overheating protection is triggered and will return to operation automatically once the heat has dissipated sufficiently

**Speed** – the speed of the table varies with load (see separate diagram)

**Memory function** – The control unit will retain information regarding the elevation of the table at all times. This information will remain stored even in case of power failure or if the power cable is disconnected from the power outlet.

**Soft start** – Progressive acceleration allows for soft starts and stops